



Installation Guide

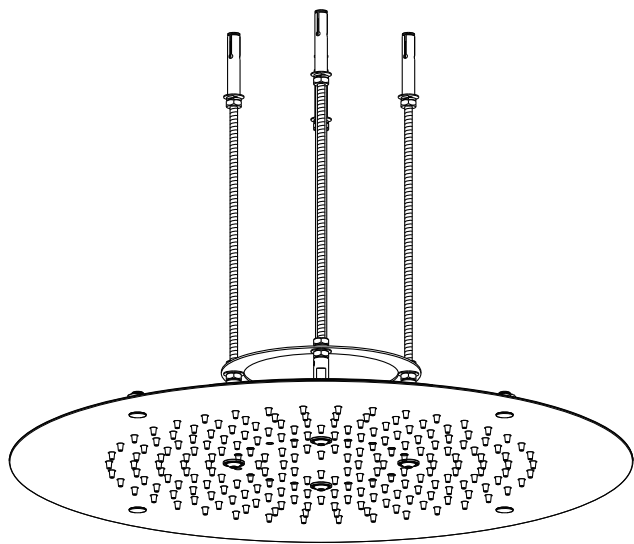


Shower Head Installation Instructions

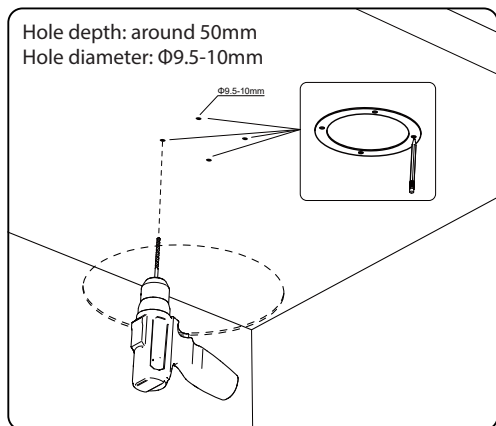


Use the bracket frame as template, marking the installation line by pencil.
Drill 9.5-10mm diameter hole, depth around 50mm, then knock in the screw plug.

Please flush the pipe first to avoid the debris go inside the head shower.

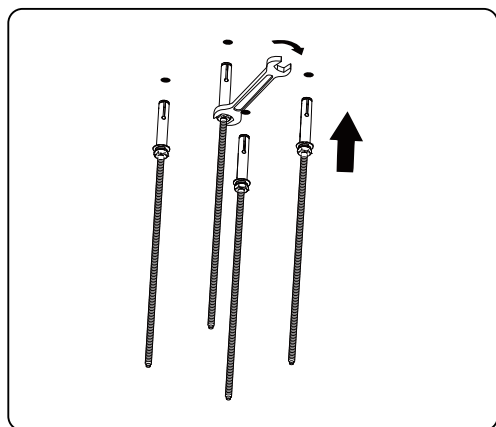


Install and tight the expansion rod by using 10mm spanner.

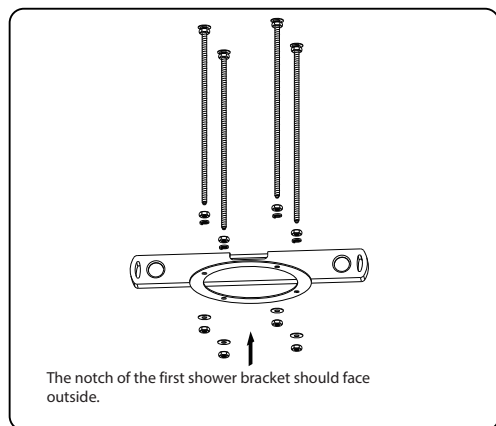


Install the shower bracket, make sure the brackets are at the same level, then tight the screw by spanner.
Depending on different ceiling, the M6 expansion rod can be cut if necessary.


Shower Head Installation Instructions

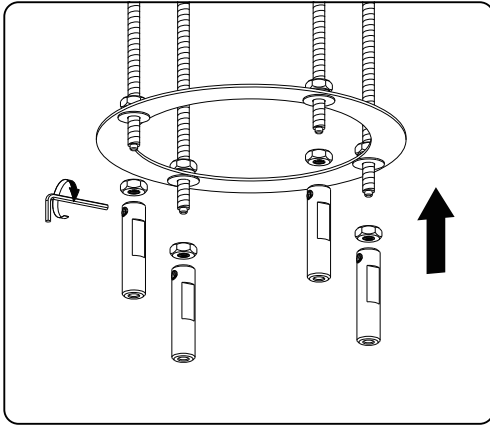

Install the connector onto the M6 screw rod and use a hex wrench to tighten it from the side.

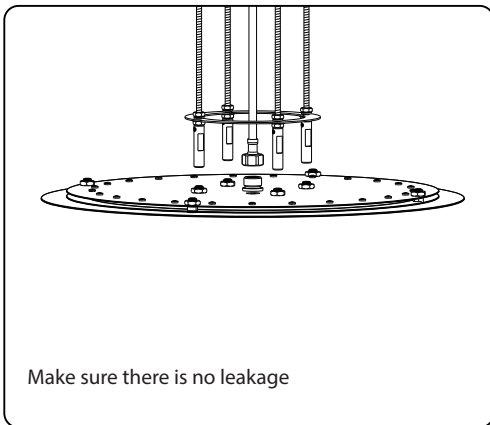


Connect the hose to pre-installed G1/2 water outlet, Open water and flush the pipe. Then connect the hose to shower body, check if there is any leakage. If leakage then fix it, If not then move the next step.

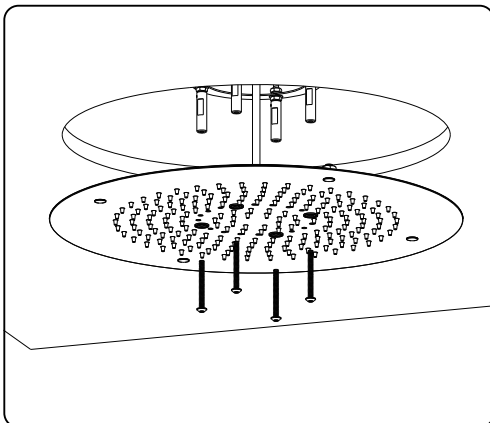

Pass the screw rod through the overhead shower into the connector and tighten it with a hex wrench.

Dimension

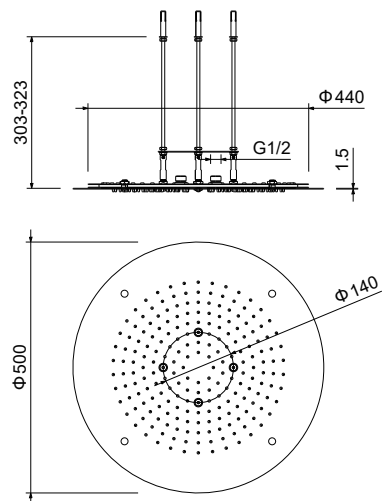

Cleaning and care

Our Kitchen and bathroom products are made of the best materials to comply with the needs of the market with regard to design and functionality. To avoid damage to the product, it is necessary to take proper care of it.

Clean the products often with a soft cloth to keep it looking like new. For heavy cleaning you can use mild liquid detergents or non-abrasive liquid polisher. Rinse with water and dry with a soft cloth. Avoid abrasive cleaners, steel wool and harsh chemicals as these will dull the finish and void your warranty.